

# FLOWER BOX PLANTER INSTRUCTIONS

DDPL1 AND DDPL1S

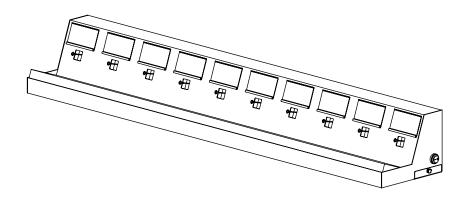


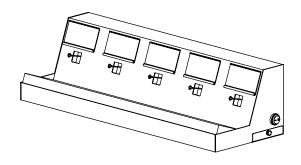

### **INCLUDED HARDWARE**





 

**POWER ADAPTER ASSEMBLY** 

# **INCLUDED TOOLS**



**SMALL ALLEN KEY** 

### **OPTIONAL TOOLS**






ELECTRIC DRILL WITH 2" HOLE SAW

## **RIGHT OUT OF THE BOX**


# ELECTRICAL LEAD

- YOUR FLOWER BOX PLANTER IS READY TO USE OUT OF THE BOX. CONNECT THE LEAD COMING FROM THE BACK OF THE PLANTER TO THE POWER ADAPTER.
- PLUG THE POWER CORD INTO A WALL OUTLET.
- FLIP THE TOGGLE SWITCH.

### **TETHERING A FLOWER BOX**

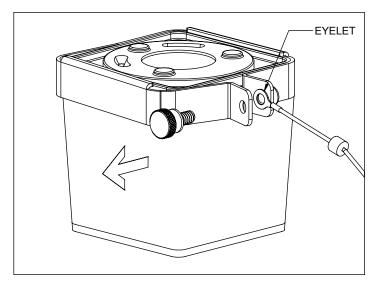

- WITH PRODUCT SEALED IN THE FLOWER BOX, REMOVE THE SECURITY SCREW.
- PLACE ONE OF THE EYELETS FROM THE PLANTER TETHER BETWEEN THE FLOWER BOX CLAMP AND REINSTALL THE SECURITY SCREW.

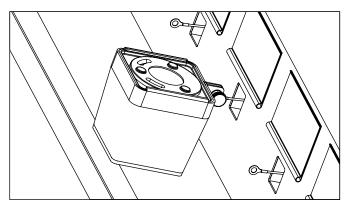

- ALLOW THE FLOWER BOX TO BE PULLED INTO THE PLANTER. AN INTERNAL MAGNET WILL HOLD THE BOX IN PLACE.


# MOUNTING TO A TABLE TOP (CASEMENT SHOWN FOR REFERENCE)

MAIN BODY

BASE
PLATE
SCREW


- REMOVE THUMB SCREWS FROM THE SIDE OF PLANTER AND REMOVE THE MAIN BODY OF THE PLANTER.
- POSITION THE BASE PLATE WERE IT WILL BE INSTALLED AND MARK THE CENTER OF SCREW HOLES AND WIRE GROMMET.

2

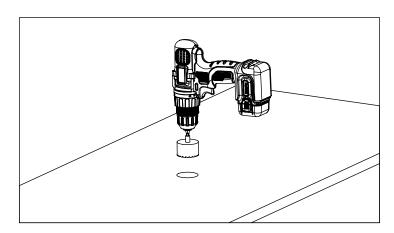


- DRILL THE WIRE ROUTING HOLE WITH A HOLE SAW.

3

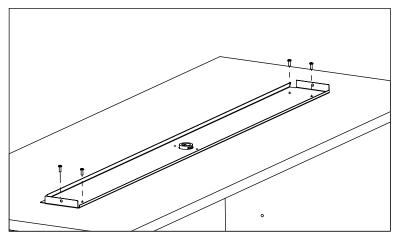

- MOUNT THE BASE PLATE WITH AT LEAST (4) WOOD SCREWS.


4

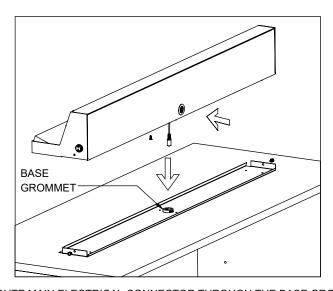


- ROUTE MAIN ELECTRICAL CONNECTOR THROUGH THE BASE GROMMET.
- REINSTALL MAIN BODY OF THE PLANTER.




1

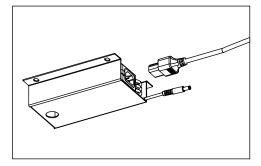


- IF NOT ALREADY INSTALLED, INSERT THE OUTLET PLUG INTO THE POWER ADAPTER.

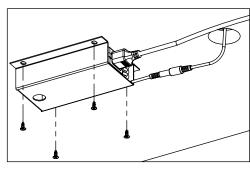

- MOUNT POWER ADAPTER ASSEMBLY TO WOOD MATERIAL WITH WOOD SCREWS.

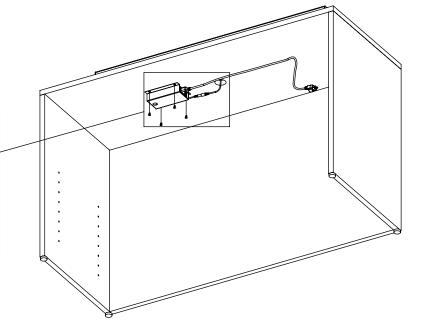

2

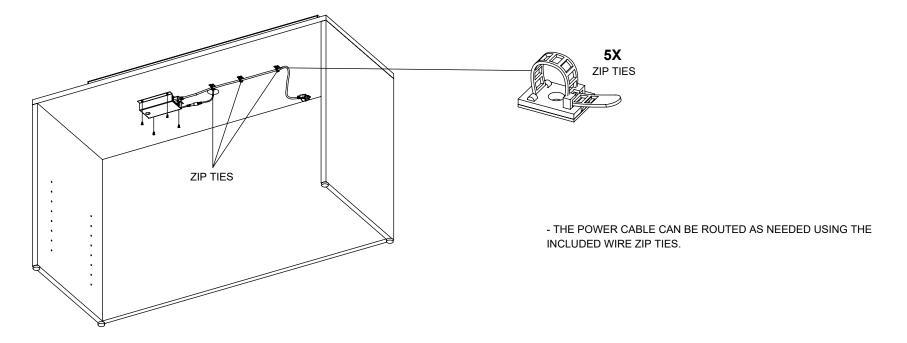


### TROUBLE SHOOTING INSTRUCTIONS

1

CHECK CONNECTION BETWEEN LED LIGHTS AND INTERNAL WIRING.

TRY TURNING ON LIGHTS AGAIN. IF LIGHTS DO NOT TURN ON, GO TO NEXT STEP.



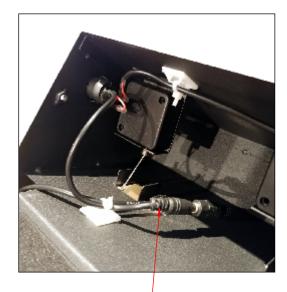


-CHECK IF LOOSE

2

CHECK CONNECTION BETWEEN MOUNTING BRICK AND POWER CORD (MOUNTING POWER BRICK ASSEMBLY STEPS.)

TRY TURNING ON LIGHTS AGAIN. IF LIGHTS DO NOT TURN ON, GO TO NEXT STEP.

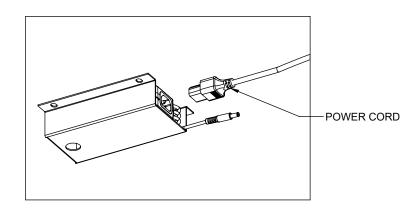

IF LIGHTS DO NOT TURN ON, CONTACT CUSTOMER SERVICE AT cs@displaydispensary.com