
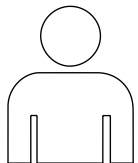



2-WAY SLATWALL MERCHANDISER

Items # WDSWH24(-BK, -MP, -WH),
WDCAS2H24

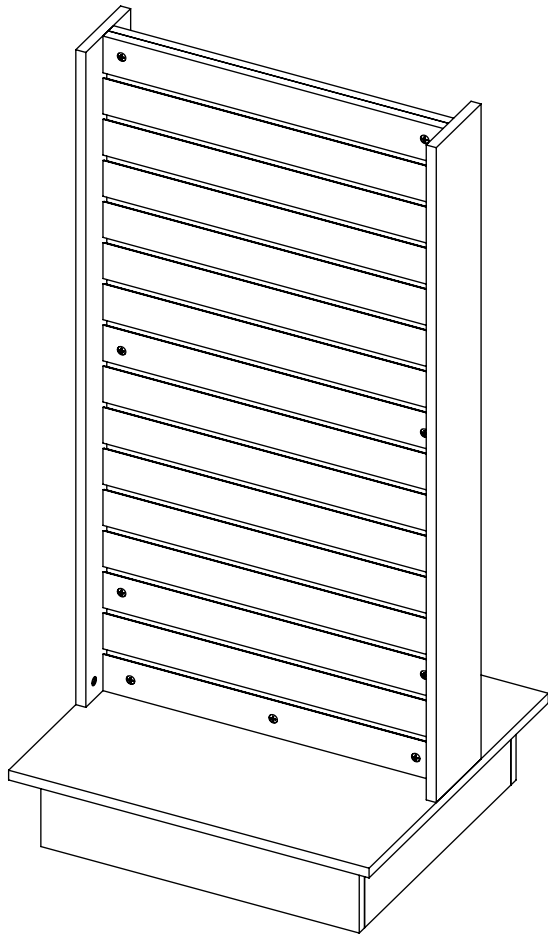

**2-3 PEOPLE
REQUIRED
FOR
ASSEMBLY**

INCLUDED HARDWARE



38X
CAM LOCK AND STEM





22X
STICKER

TOOLS REQUIRED

SCREWDRIVER

1



- INSERT STEM ON FRONT BASES.
- ASSEMBLE WITH SIDE BASES.

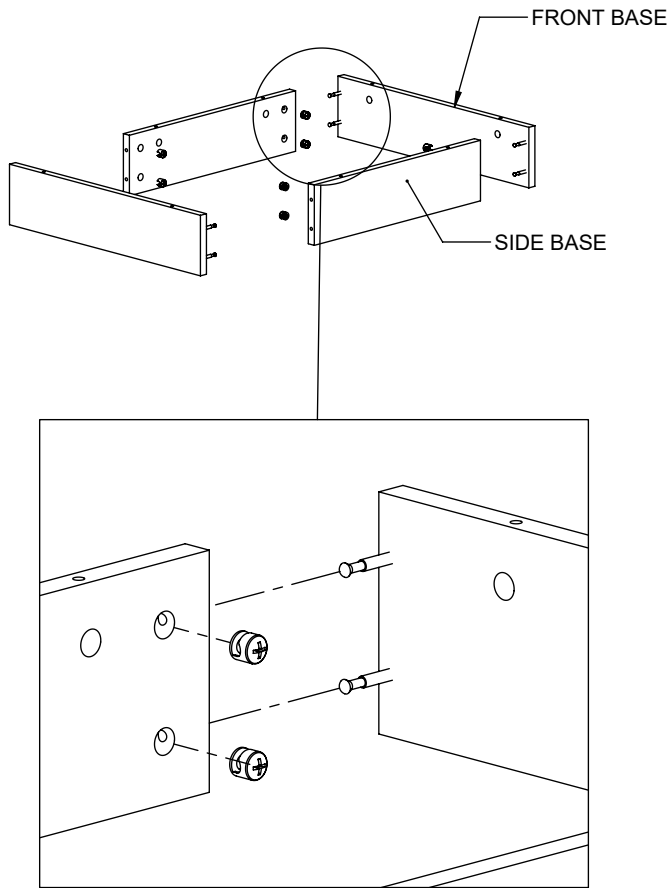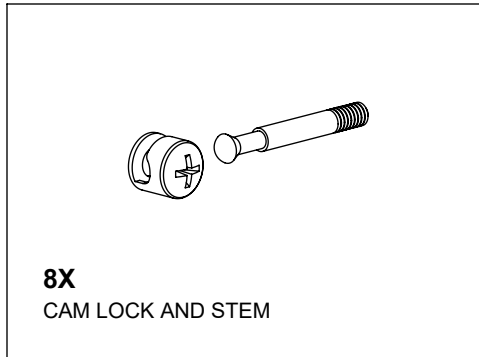

2



- INSERT STEMS ON BOTTOM OF FLOOR PANEL.
- ASSEMBLE AS SHOWN.

IF CASTER KIT WAS NOT PURCHASED, SKIP TO SHEET 5.

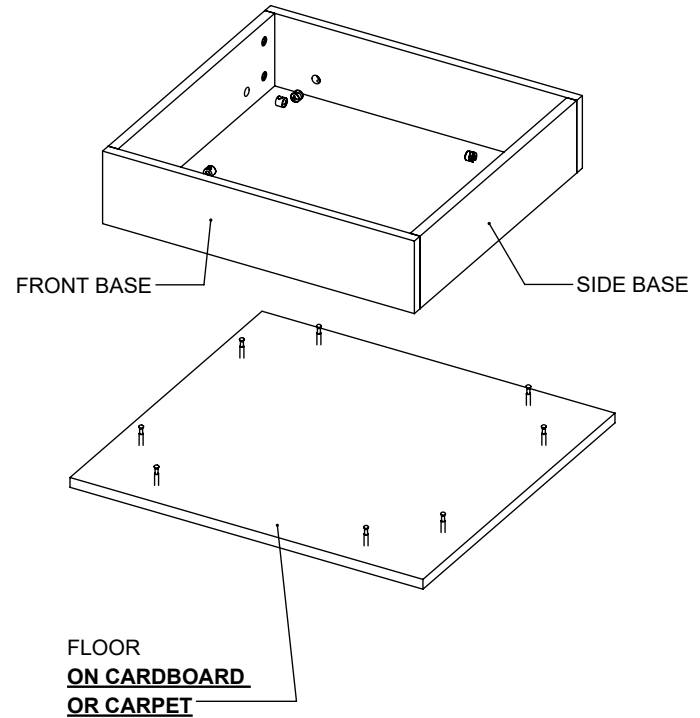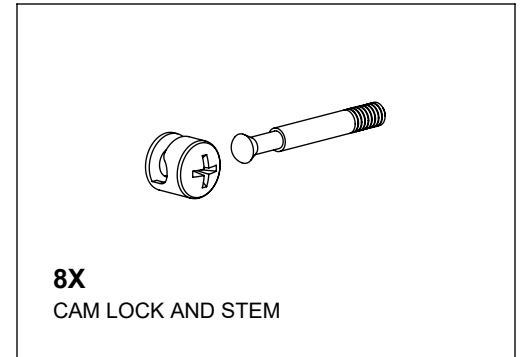


CASTER KIT INSTRUCTIONS

ITEM #WDCAS2H24

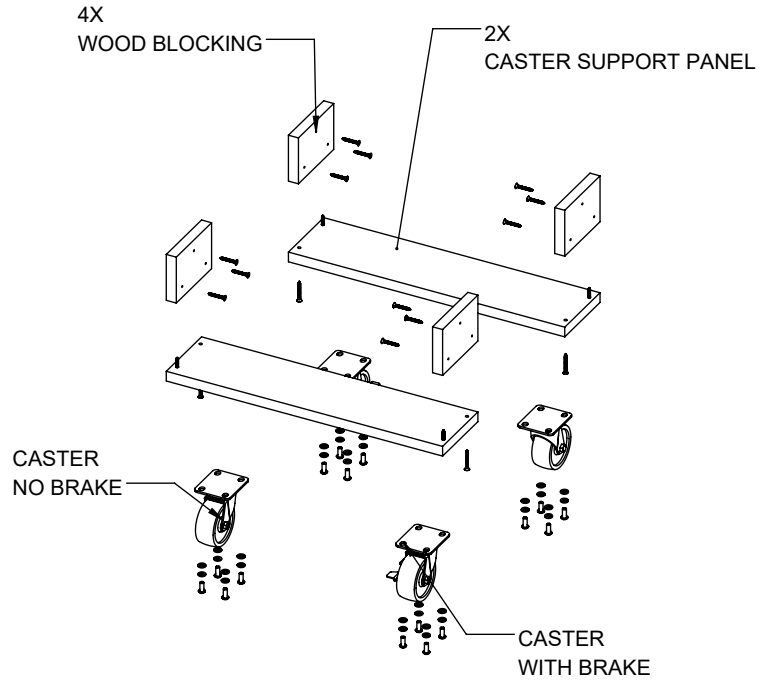

12X
#8 X 1.18" LONG
FLAT HEAD WOOD SCREW




8X
#8 X 1.42" LONG
FLAT HEAD WOOD SCREW


1

PUT WOOD BLOCKING ON
4 CORNERS, AND SCREW
IN WITH WOOD SCREWS.

NOTE THE LONG AND
SHORT SIDES OF THE
BASE.




12X
#8 X 1.18" LONG
FLAT HEAD WOOD SCREW

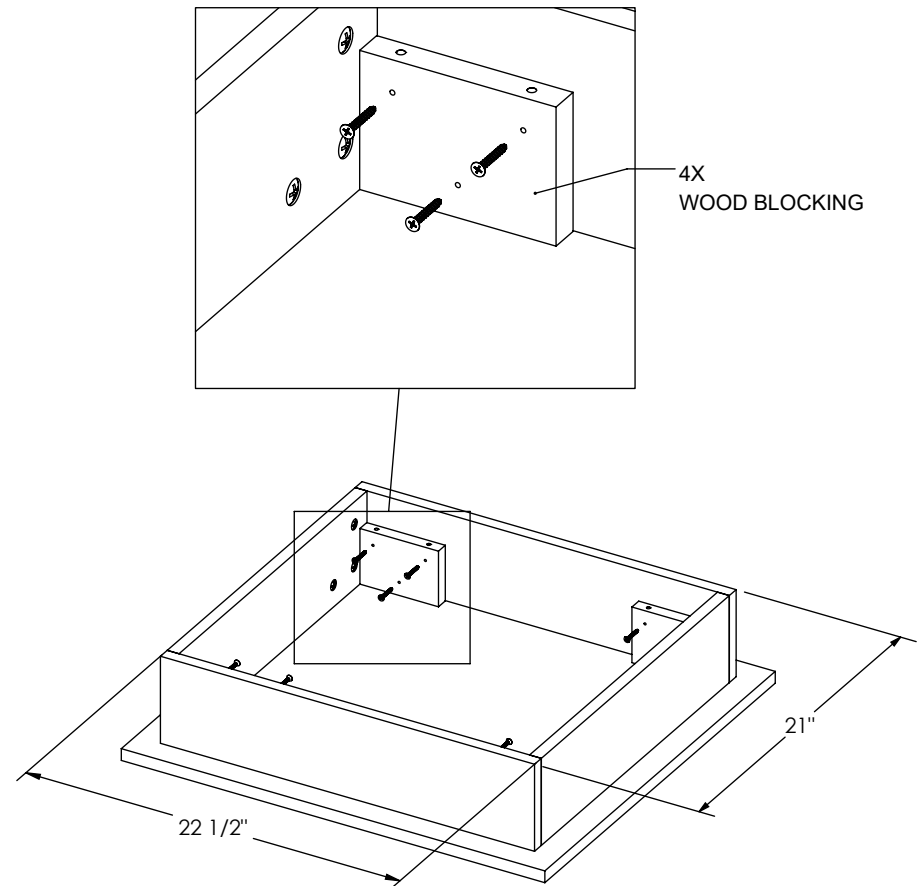


2


PUT CASTER SUPPORT
PANEL OVER WOOD
BLOCKING, AND SCREW IN
WITH WOOD SCREWS.



8X
#8 X 1.42" LONG
FLAT HEAD WOOD SCREW



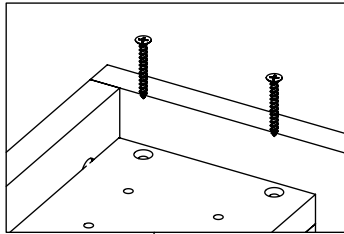


2X
CASTER
SUPPORT
PANEL

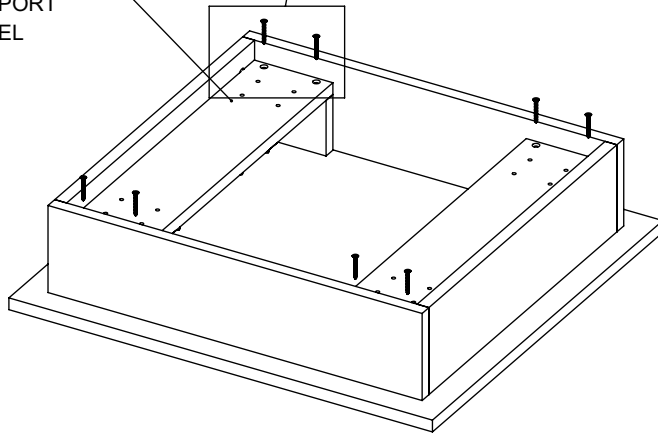

3



PUT CASTERS WITH
BRAKES AND CASTERS
WITHOUT BRAKES ON
OPPOSITE CORNERS.

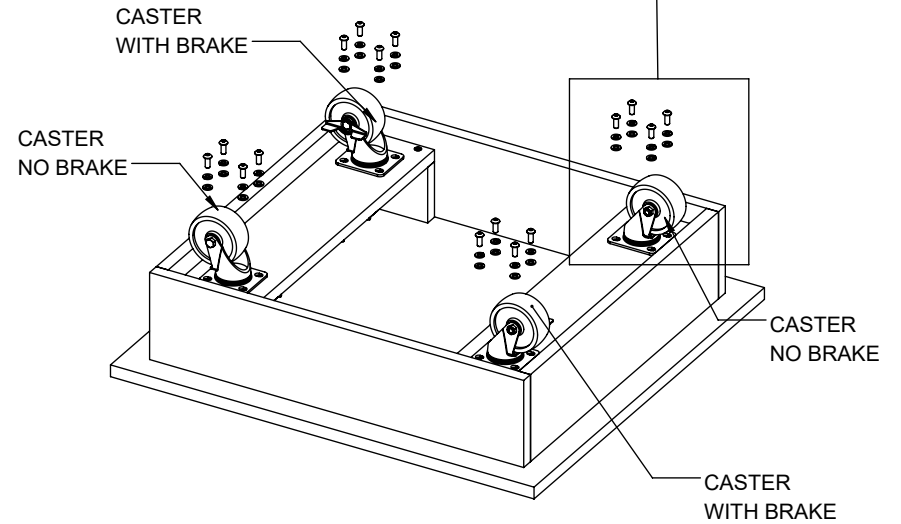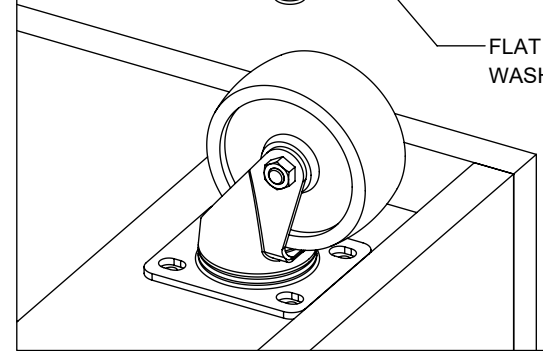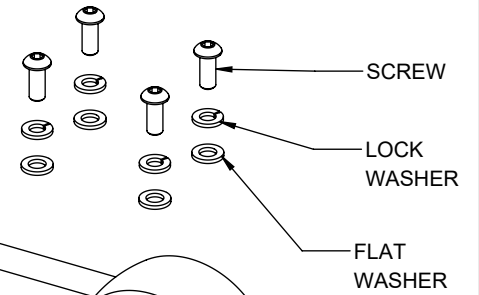


**2-WAY SLATWALL MERCHANDISER
INSTRUCTIONS
(CONTINUED FROM SHEET 2)**

3

- INSERT STEMS ON SIDE PANELS.
- ASSEMBLE AS SHOWN.

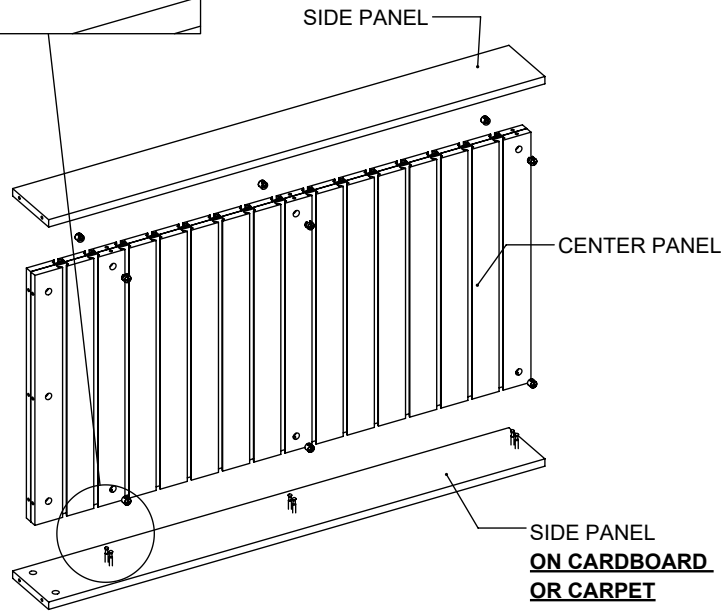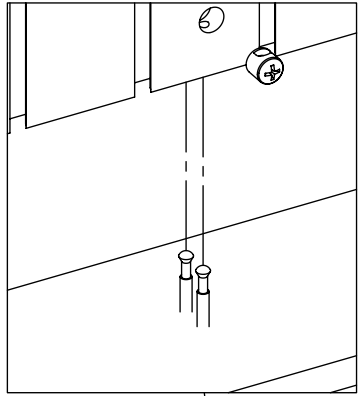



12X
CAM LOCK AND STEM



4

- INSERT STEMS ON FLOOR.
- ASSEMBLE AS SHOWN.

10X
CAM LOCK AND STEM

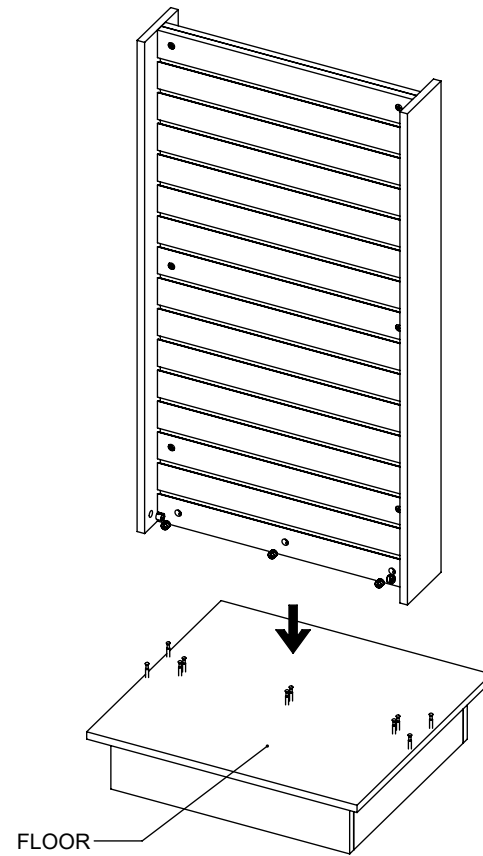

5

- SLOWLY STAND UP THE UNIT.
- PUT STICKERS ON EXPOSED CAM LOCK HOLES.
- ASSEMBLY IS COMPLETE.

