



4-WAY GARMENT RACK ASSEMBLY INSTRUCTIONS


K85

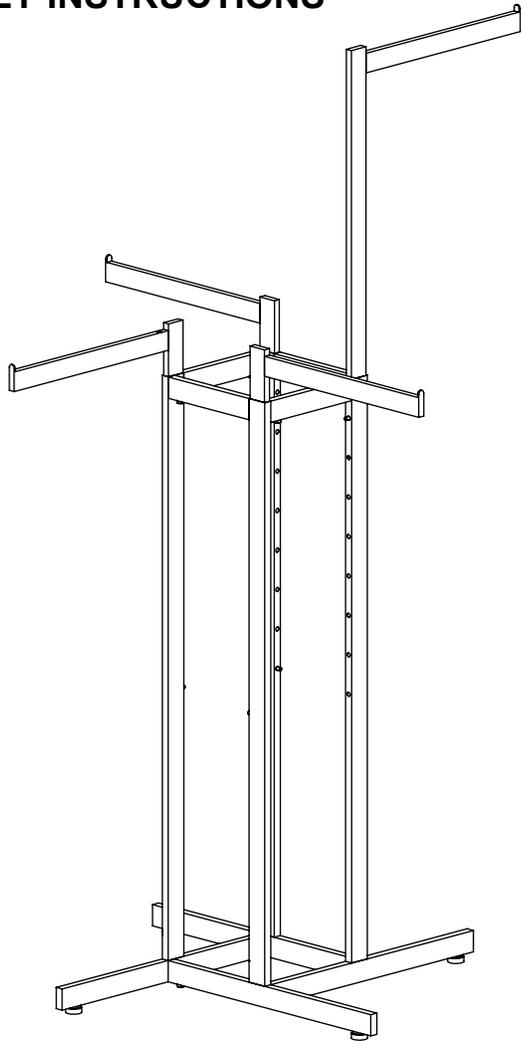

INCLUDED HARDWARE

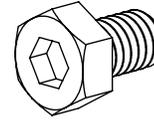


8X
5/16-18 X 1/2" LONG BOLT

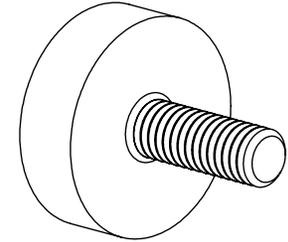

4X
LEVELER

TOOLS REQUIRED

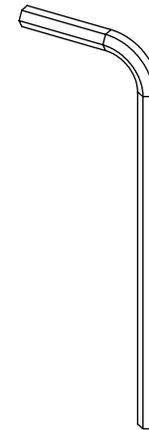


1X
ALLEN KEY

1

ASSEMBLE (2) T-FRAMES AS SHOWN.
TIGHTEN BOLT WITH INCLUDED ALLEN
KEY. BE SURE LEVELERS ARE
INSTALLED IF THEY ARE NOT
ALREADY.

2X

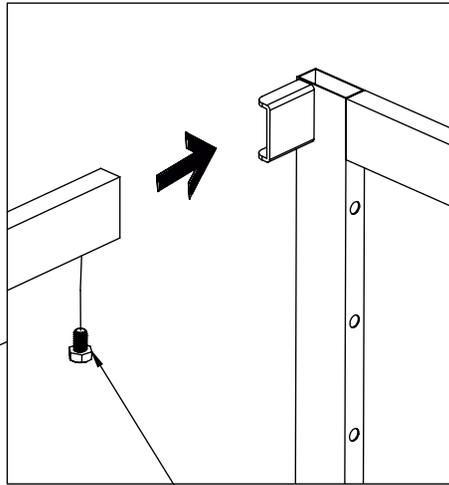


BOLT

T-FRAME


2

JOIN THE ASSEMBLIES FROM STEP 1
WITH THE REMIANING BOLTS. TIGHTEN
WITH THE INCLUDED ALLEN KEY.

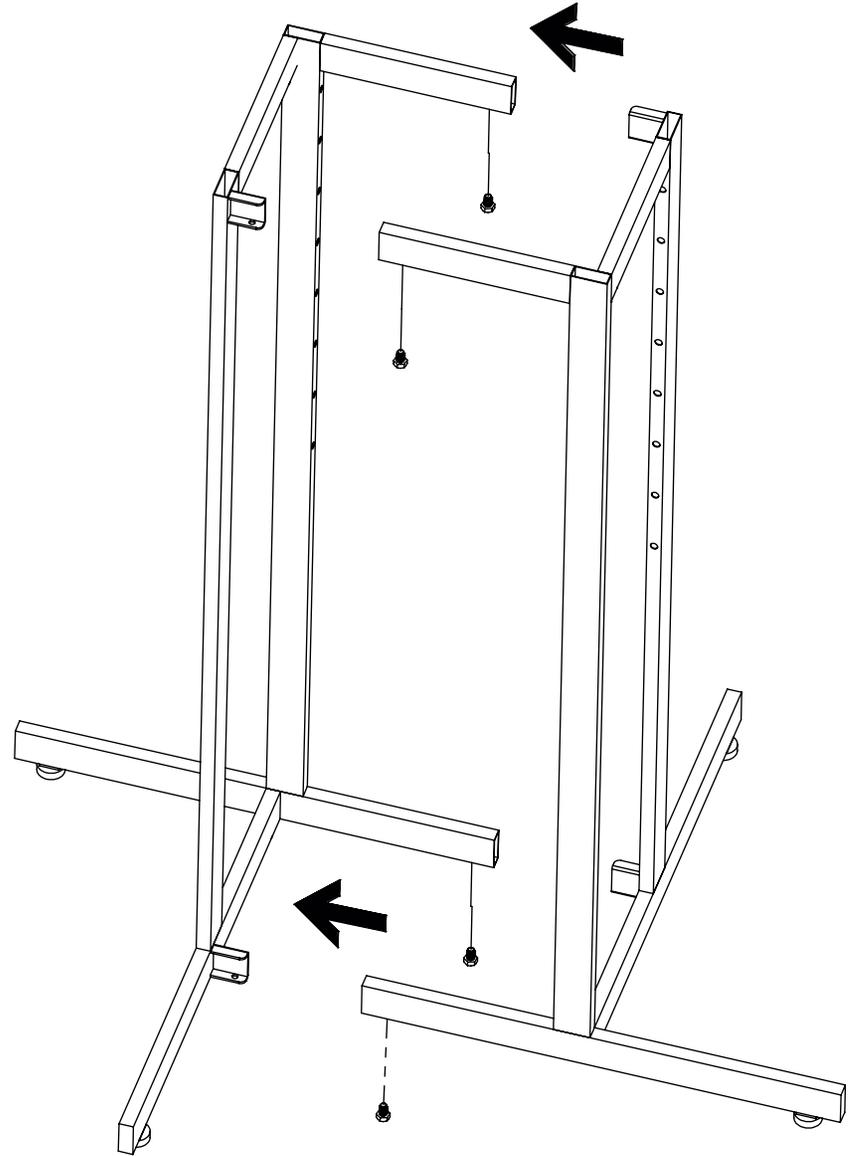

3

INSTALL ADJUSTABLE UPRIGHTS WHERE REQUIRED. DEPRESS SNAP BUTTONS TO ADJUST HEIGHT.

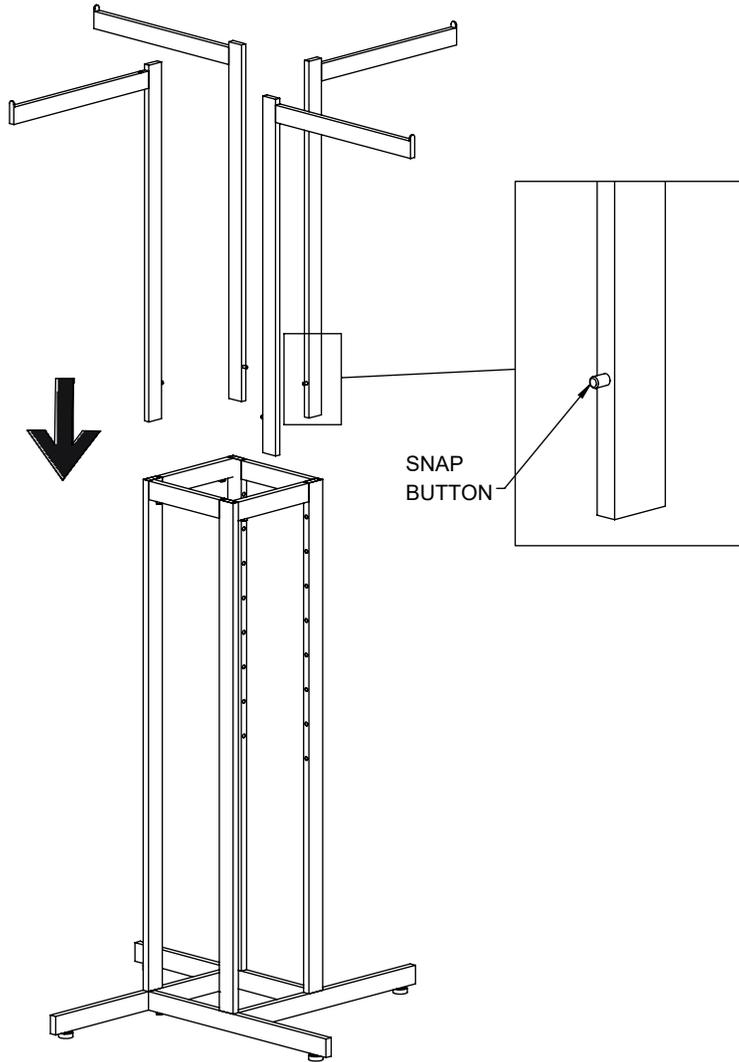

4

(1) OF THE (4) UPRIGHTS HAS A HOLE DESIGNED FOR "STAY SQUARE" STYLE SIGN HOLDERS WITH SWEDGE STEMS.

