
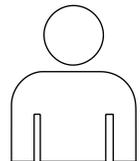



72" LONG WRAP COUNTER UNIT

Item # PW-WC72

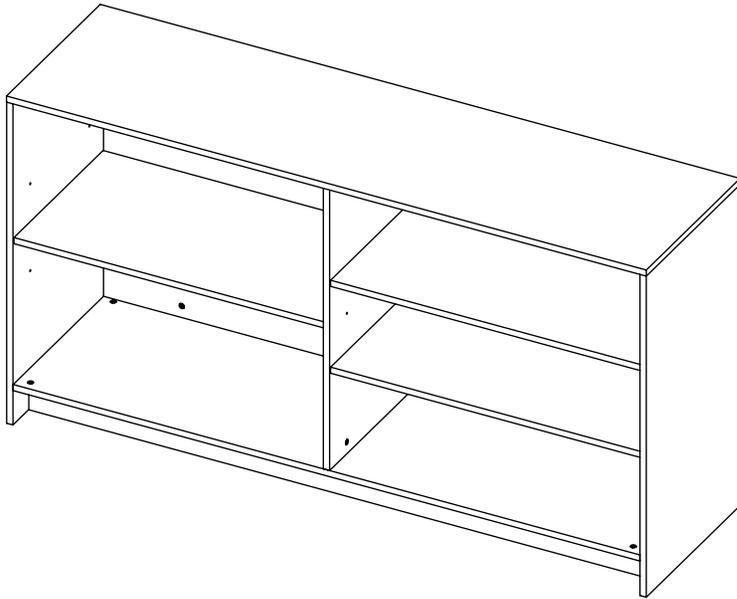

**2 PEOPLE
REQUIRED
FOR
ASSEMBLY**

INCLUDED HARDWARE

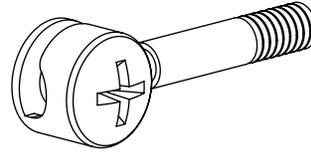

**42X
CAM LOCK**




**12X
SHELF PIN**



**22X
STICKER**


1

MOUNT (2) TOE KICK PANELS
TO THE BASE PANEL USING
(8) CAM LOCKS.

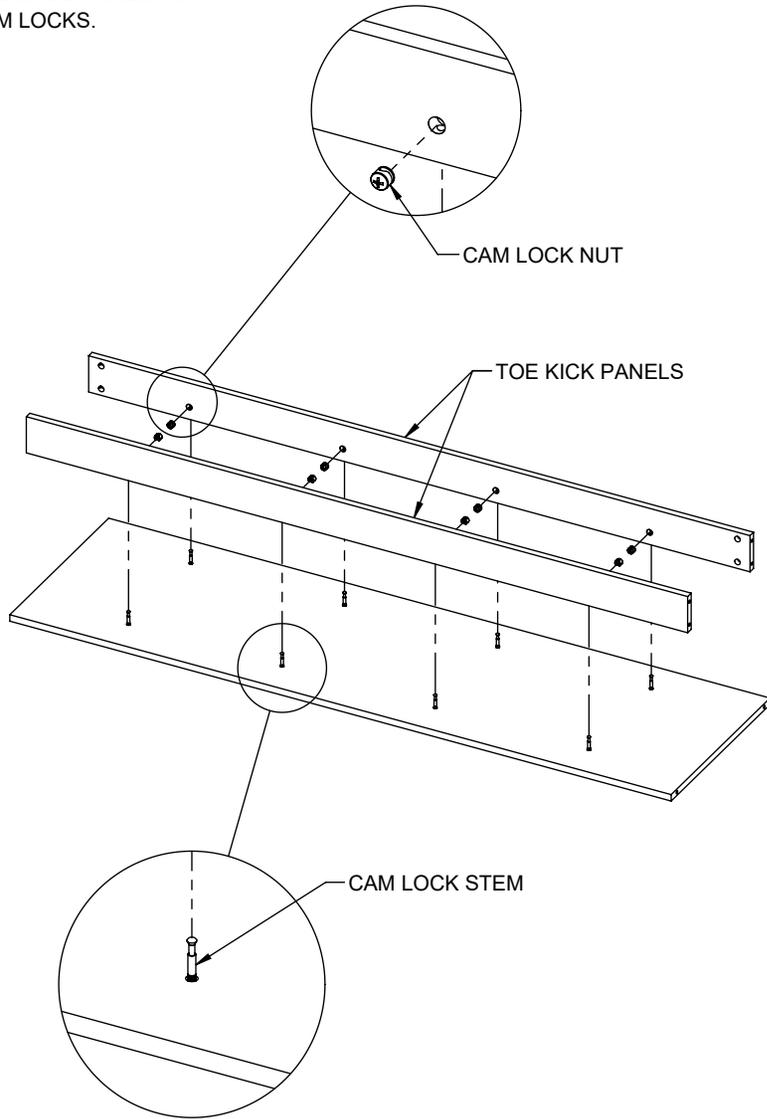


2

MOUNT THE CENTER PANEL TO THE
BACK PANEL USING (2) CAM LOCKS.

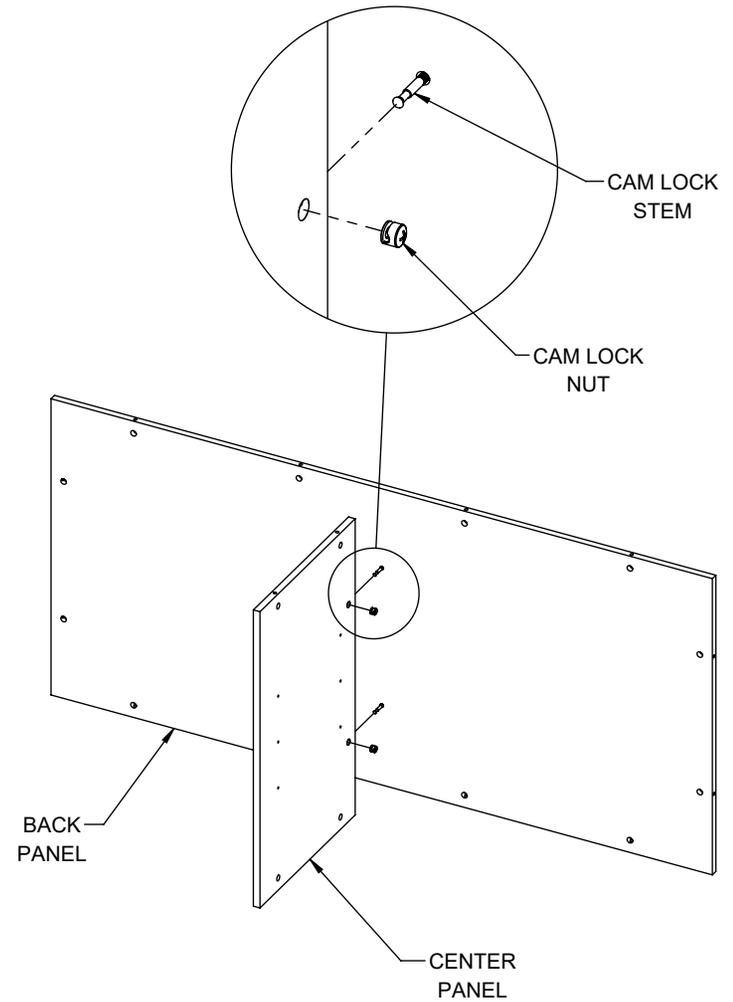


3

MOUNT BACK AND CENTER PANEL TO THE BASE PANEL USING (6) CAM LOCKS.

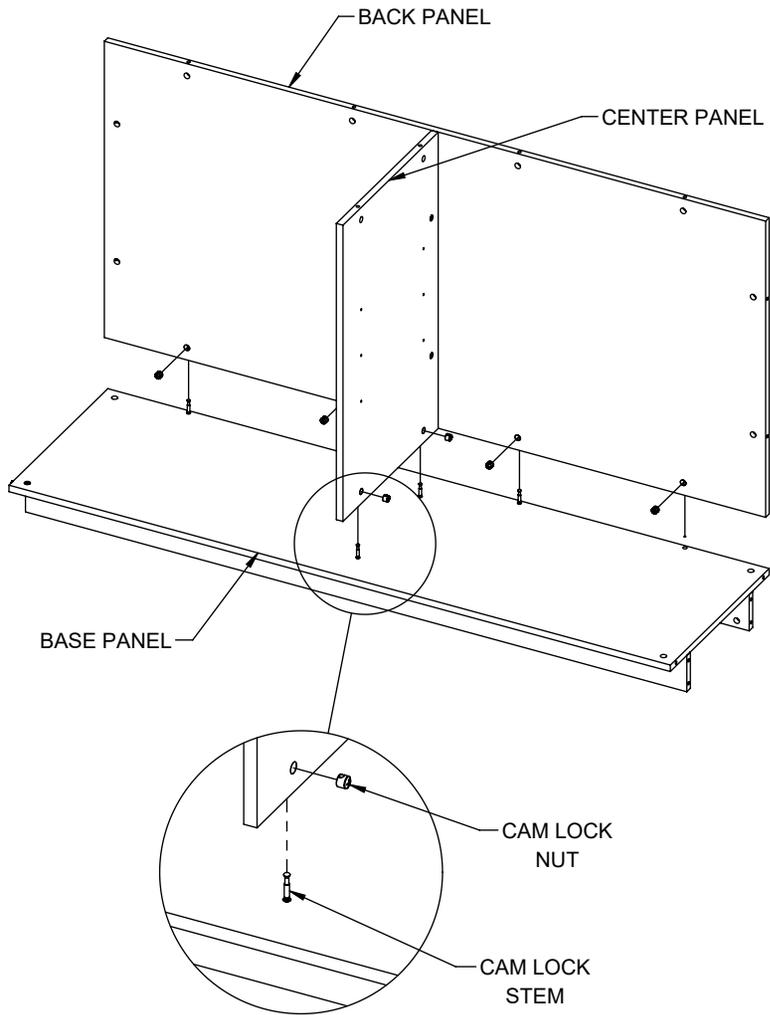


4

MOUNT (1) SIDE PANEL TO THE REST OF THE UNIT USING (8) CAM LOCKS.

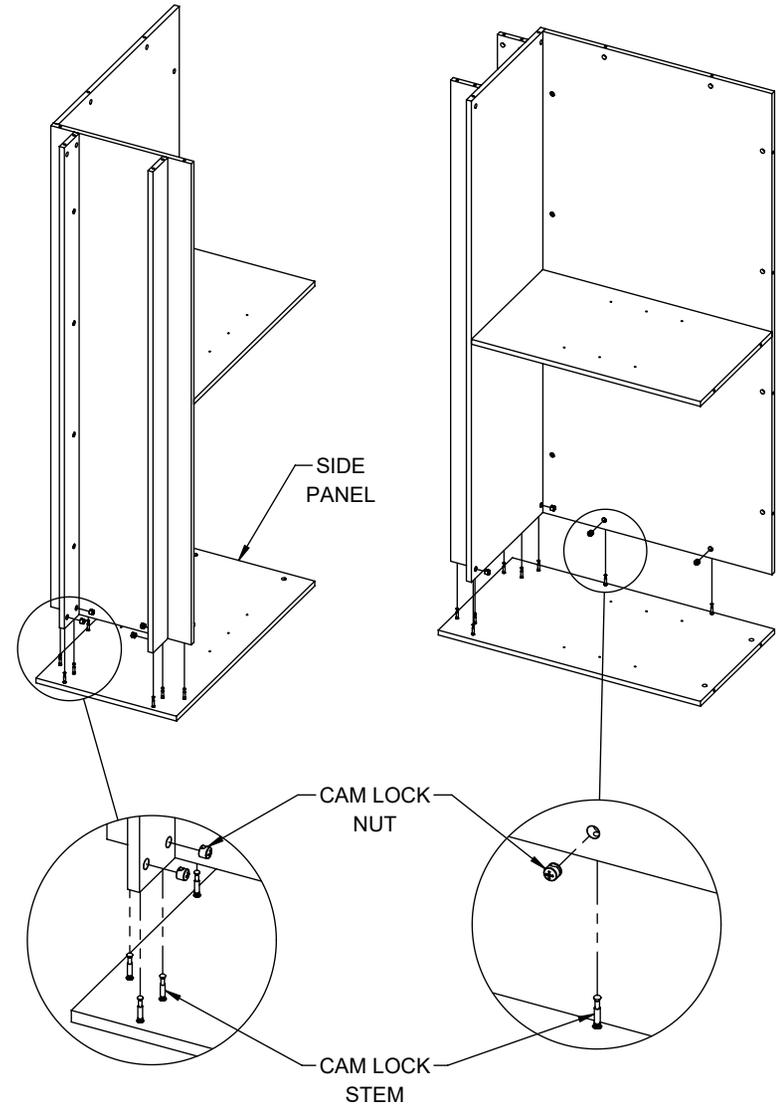

5


MOUNT THE OTHER SIDE PANEL TO THE REST OF THE UNIT USING (8) CAM LOCKS.

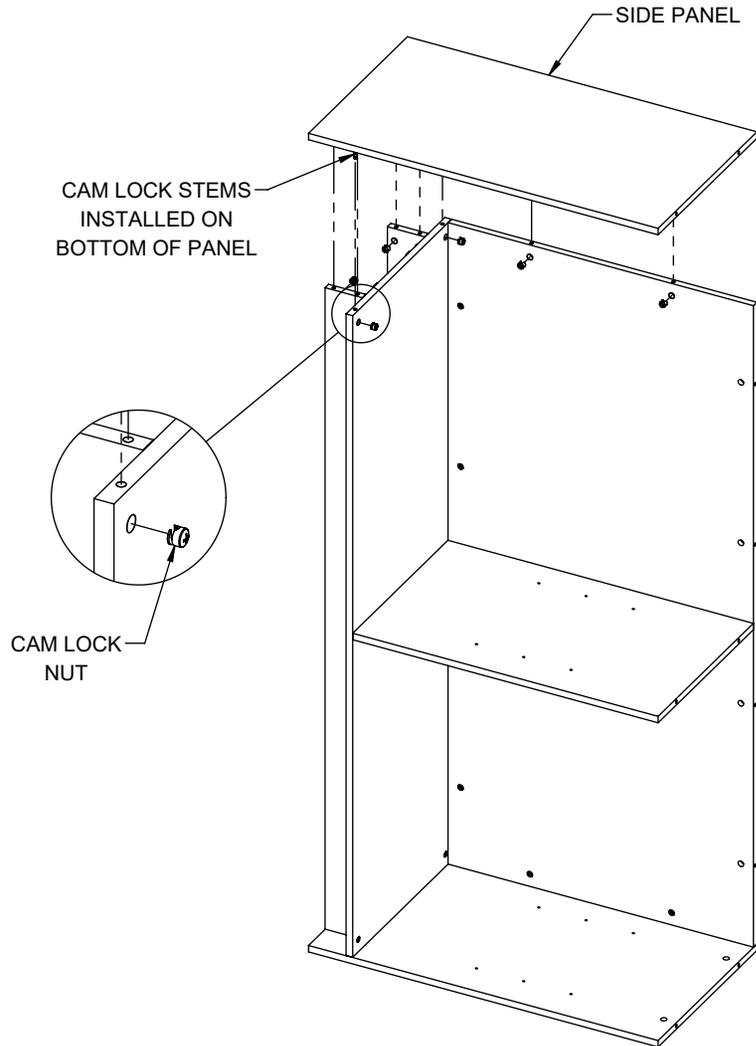

6


MOUNT THE TOP PANEL TO THE REST OF THE UNIT USING (10) CAM LOCKS.

COVER ANY EXPOSED HOLES WITH STICKERS.

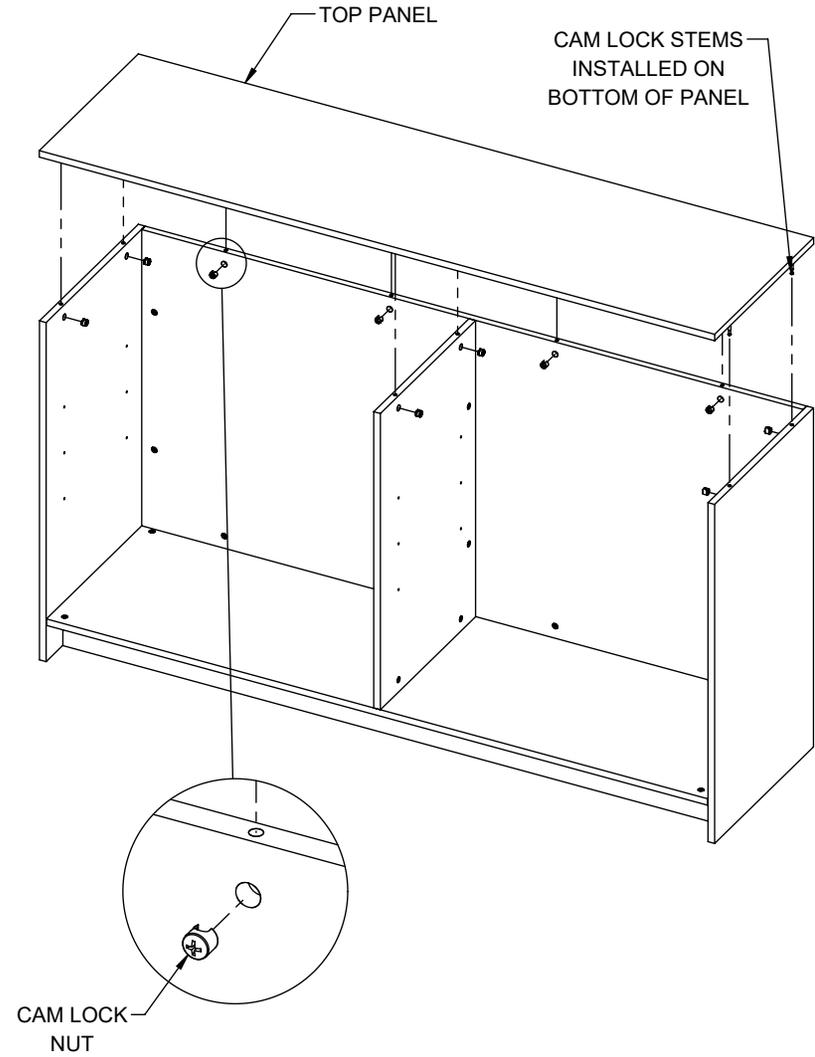

7

INSTALL (3) SHELF PANELS AT DESIRED HEIGHTS USING (4) PINS PER SHELF.

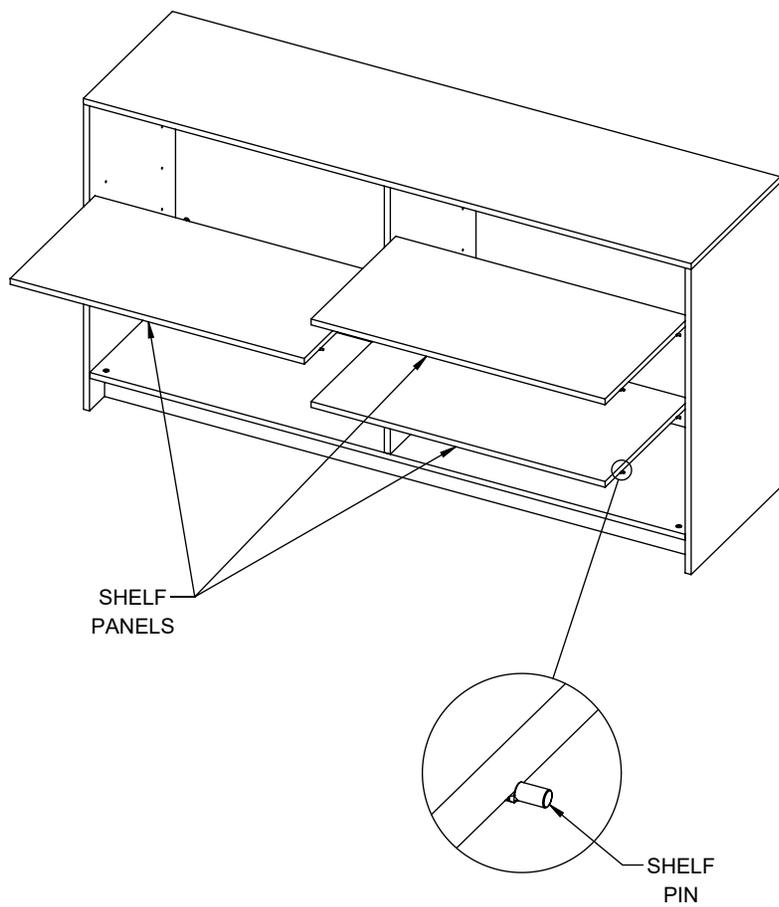

ASSEMBLY IS NOW COMPLETE

