



PIPE OUTRIGGER

ITEM# PSOR

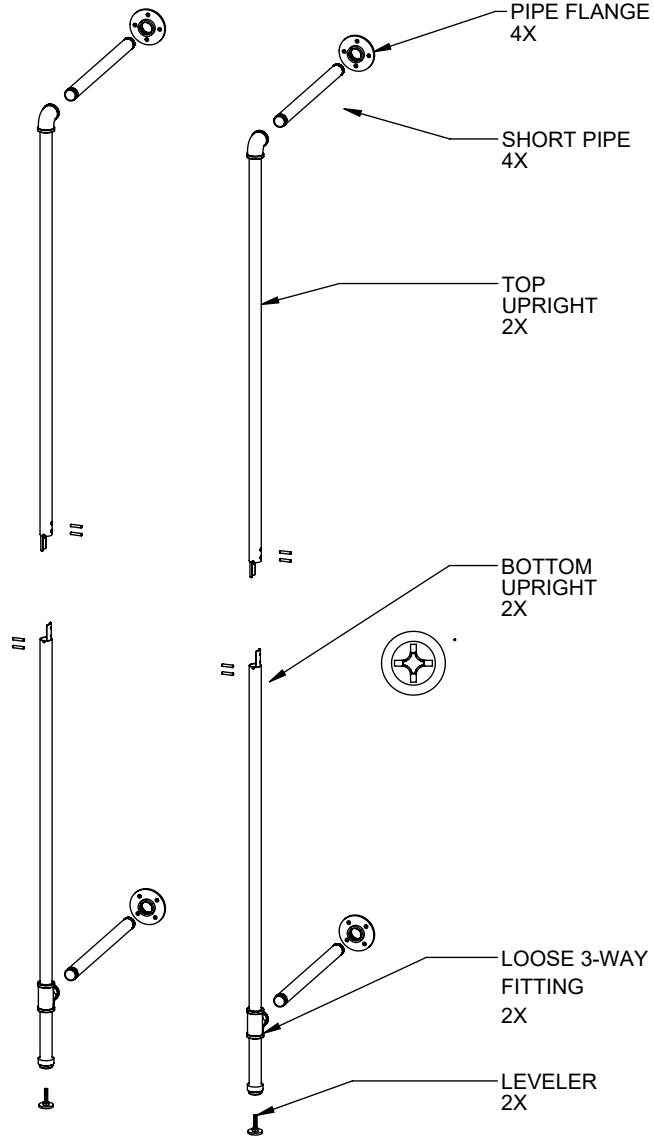

PARTS LIST


INCLUDED HARDWARE



8X
1/4\"-20 x 27mm LONG
SOCKET SET SCREW




2X
1/4\"-20 x 8mm LONG
SOCKET SET SCREW




16X
#10 x 19mm LONG
WOOD SCREW
(FOR WALL MOUNTING
WITH APPROPRIATE
STRUCTURE)

INCLUDED TOOLS




ALLEN KEY


NOT INCLUDED TOOLS

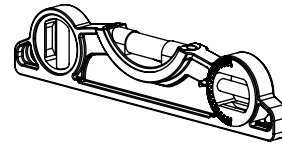


BUBBLE LEVEL




TAPE MEASURE

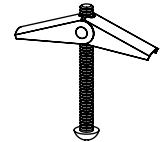

#10 WALL ANCHORS
(STYLE DEPENDENT ON
WALL STRUCTURE)

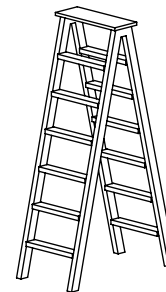


STEP LADDER

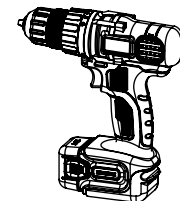

POWER DRILL


1

ASSEMBLE OUTRIGGER POST

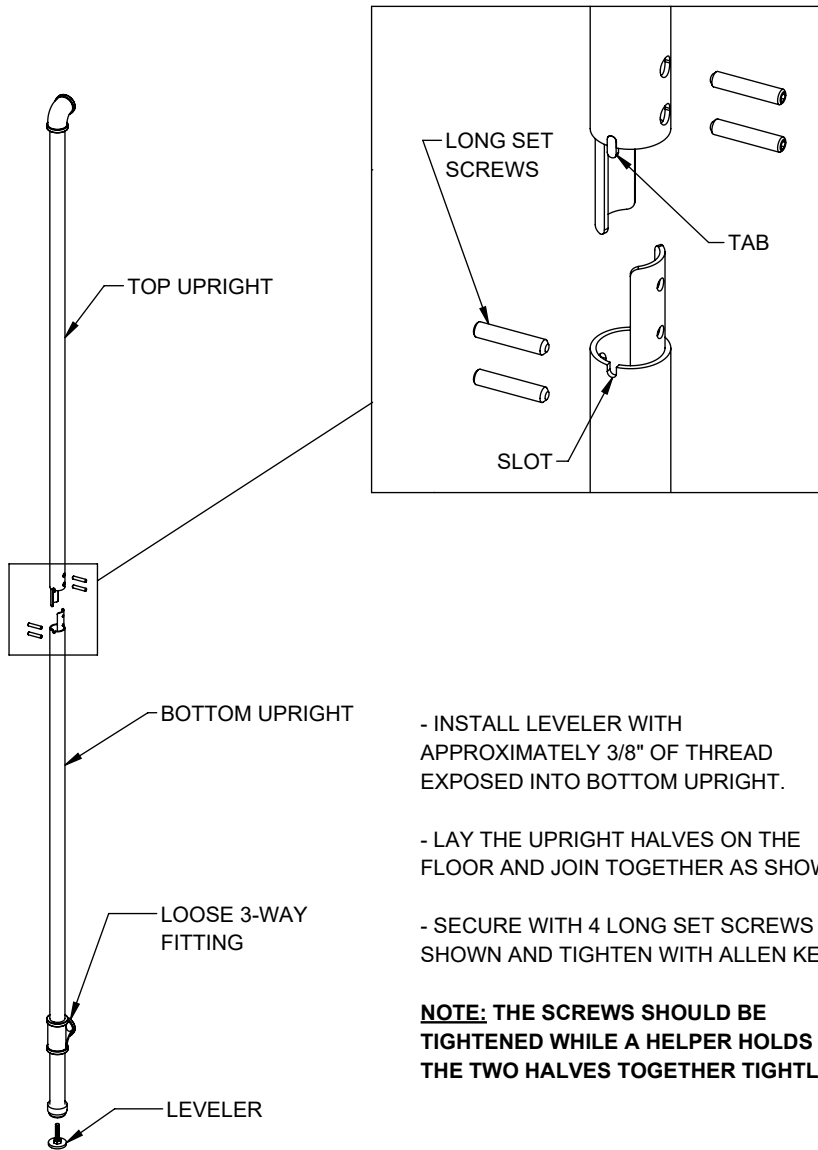

2


INSTALL SHORT PIPES AND PIPE FLANGES FOR WALL MOUNTING

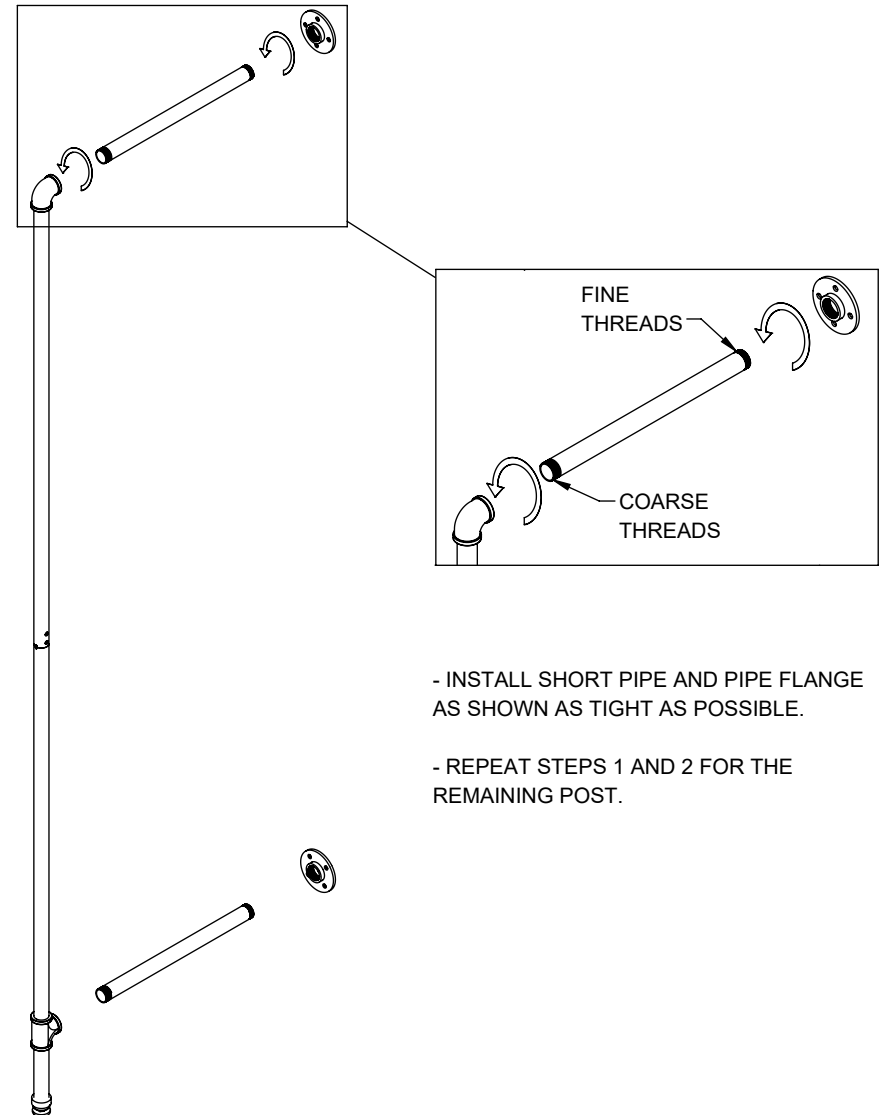

3


SECURE FIRST POST TO THE WALL

IDEAL FLANGE ORIENTATION

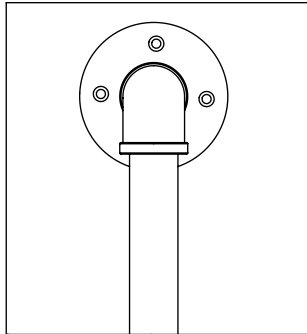

90.0°

SECURING LOWER CONNECTOR

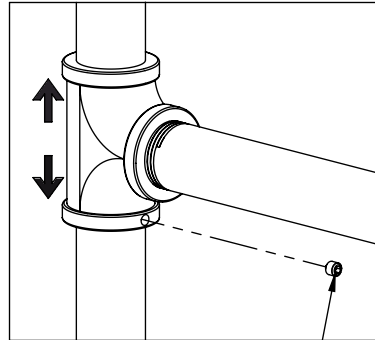

SHORT SET SCREW (PRE-INSTALLED)

- WITH AT LEAST 2 PEOPLE, POSITION THE ASSEMBLED UPRIGHT AGAINST THE WALL.

- ADJUST THE LOWER CONNECTOR TO AVOID ANY WALL MOLDINGS AND SECURE THE HEIGHT BY TIGHTENING THE INSTALLED SHORT SET SCREW.

- USING A LEVEL, CHECK THAT THE POST IS PLUMB.


- MARK AND SECURE THE WALL FLANGES TO THE WALL AS REQUIRED WITH APPROPRIATE HARDWARE.

NOTE: FOR MAXIMUM STRENGTH, THE PIPE FLANGE SHOULD BE ORIENTED AS SHOWN ABOVE.

- BE SURE THE LEVELER IS FIRMLY CONTACTING THE FLOOR. IF NOT, UNTHREAD UNTIL IT IS.

4


SECURE REMAINING POSTS WHERE THEY ARE REQUIRED

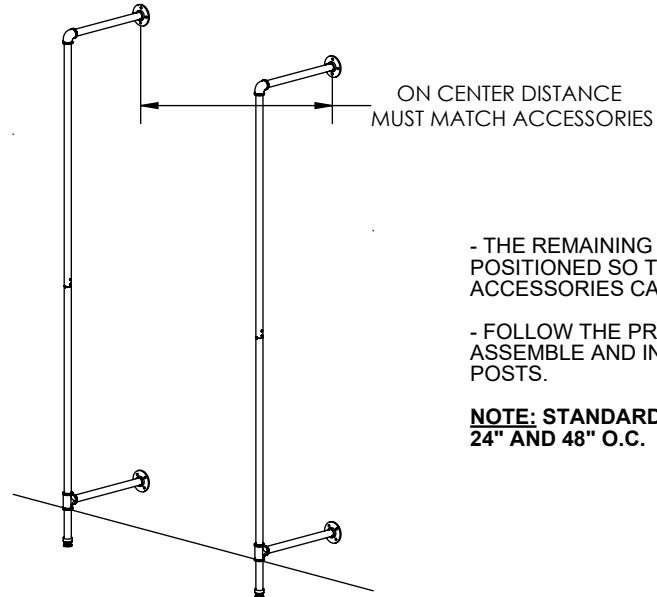

- THE REMAINING UPRIGHT MUST BE POSITIONED SO THE DESIRED ACCESSORIES CAN BE USED.

- FOLLOW THE PRIOR STEPS TO ASSEMBLE AND INSTALL ANY REMAINING POSTS.

NOTE: STANDARD ACCESSORY SIZES ARE 24" AND 48" O.C.

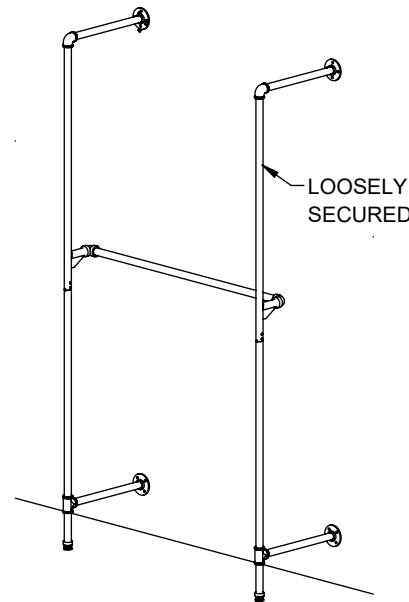

RECOMMENDED BUT NOT MANDATORY

- IT IS RECOMMENDED TO LOOSELY SECURE THE NEXT POST TO THE WALL SO AN ACCESSORY CAN BE TESTED.

- IF IT IS DIFFICULT TO INSTALL OR REMOVE, THE UPRIGHT MAY NEED TO BE ADJUSTED.

- IF THE ACCESSORY IS NOT LEVEL, THE UPRIGHT LEVELERS MAY NEED TO BE ADJUSTED.

- IF ACCESSORIES ARE NOT AVAILABLE, USE A TAPE MEASURE TO CHECK THE ON CENTER DISTANCE.