ASSEMBLED VIEW

EXPLODED VIEW

HANGBAR
QTY. 2

TOP UPRIGHT
QTY. 4

ADJUSTABLE
CONNECTOR
QTY. 4

BOTTOM
UPRIGHT
QTY. 4

BASE
QTY. 1

CASTER (WITH
FLAT WASHER
AND LOCK
WASHER)
QTY. 4 SETS

TOOLS INCLUDED

WRENCH

ALLEN KEY

1

CASTER

LOCK WASHER

FLAT WASHER
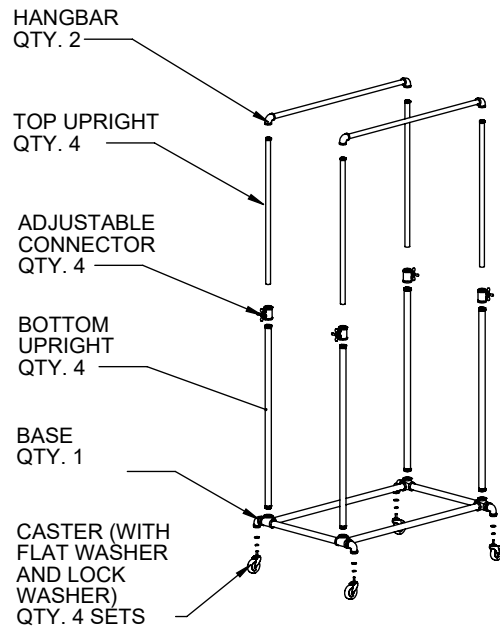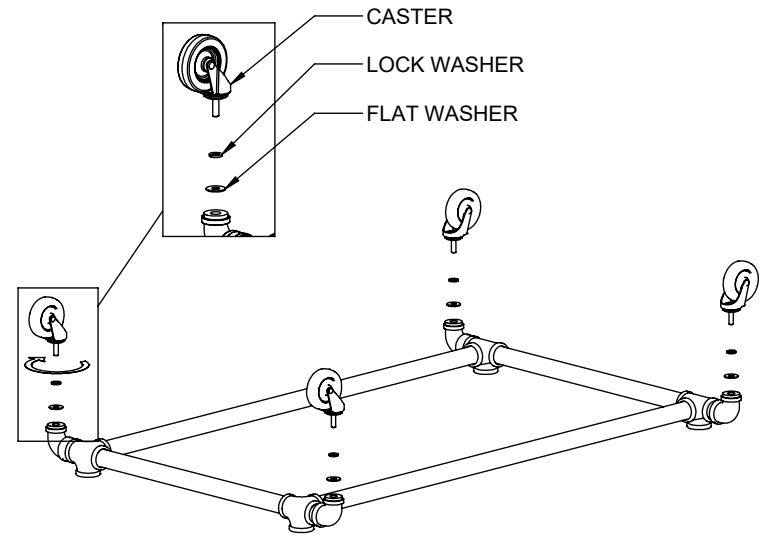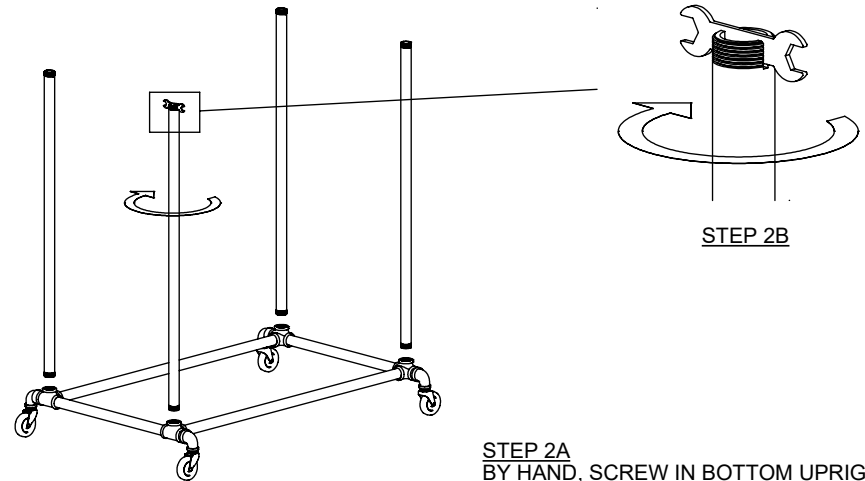
SCREW IN THE CASTERS TO THE BASE AS SHOWN USING PROVIDED WRENCH.

2

STEP 2B
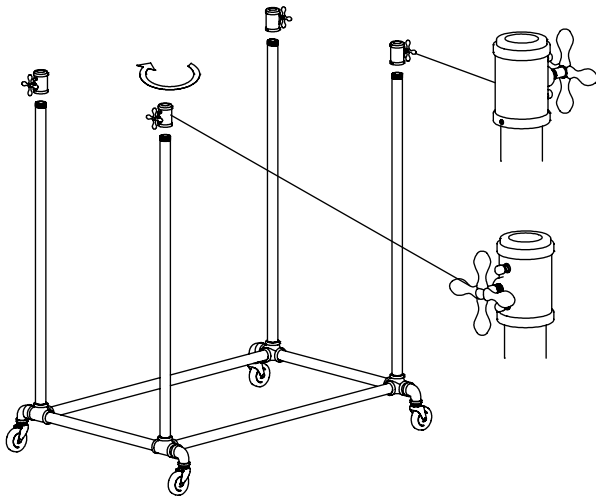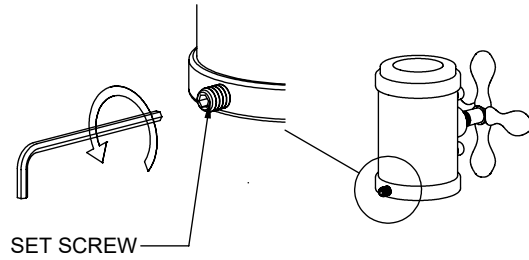
STEP 2A

STEP 2A
BY HAND, SCREW IN BOTTOM UPRIGHTS.

STEP 2B
TO FULLY TIGHTEN UPRIGHT, PLACE
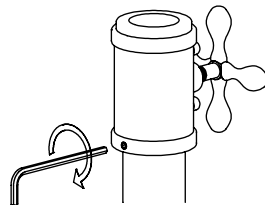INCLUDED WRENCH INTO PIPE SLOTS AS
SHOWN. TIGHTEN FULLY

PSBBLLADJ

SHEET 1 OF 2

3

WITH ALLEN KEY, SLIGHTLY BACK OUT SET SCREWS ON ADJUSTABLE CONNECTORS.
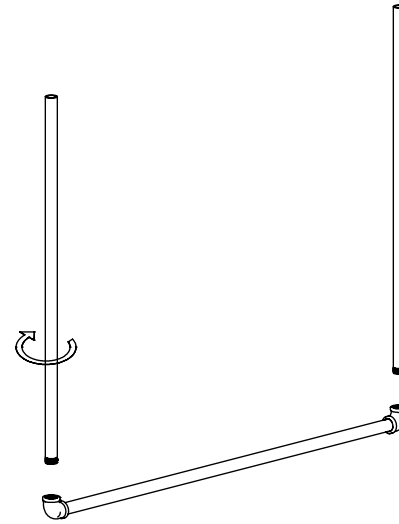
SET SCREW

BY HAND, SCREW ADJUSTABLE CONNECTORS TO BOTTOM UPRIGHTS.

ADJUST SO THAT HAND WHEELS ALIGN TO THE OUTSIDE (AS SHOWN.)

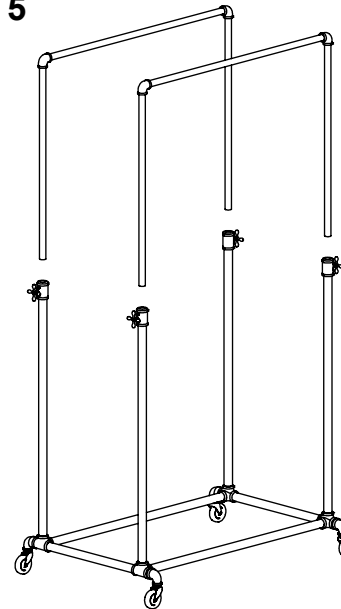TIGHTEN SET SCREW USING THE ALLEN KEY TO LOCK ADJUSTABLE CONNECTOR IN PLACE.

4

BY HAND, SCREW TOP UPRIGHTS TO HANGBAR.

5

LOOSEN

TIGHTEN

- LOOSEN HAND WHEEL ON BOTH SIDES
- DROP HANGBARS INTO DESIRED HEIGHT
- LOCK IN POSITION BY TIGHTENING THE HAND WHEEL ON BOTH SIDES

PSBBLLADJ